



ILD Single Key Unlocking Procedure


Note: Handle and key rotate CCW to unlock

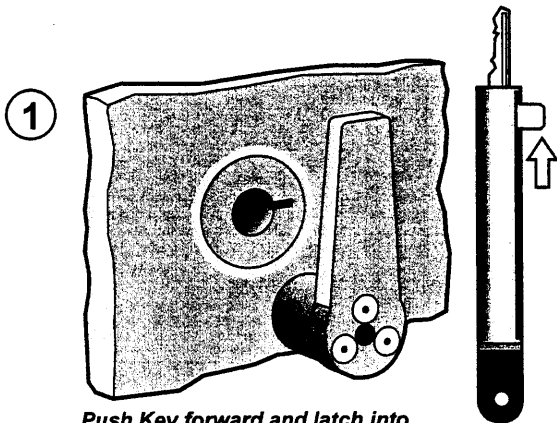


Push Key forward and latch into extended position.

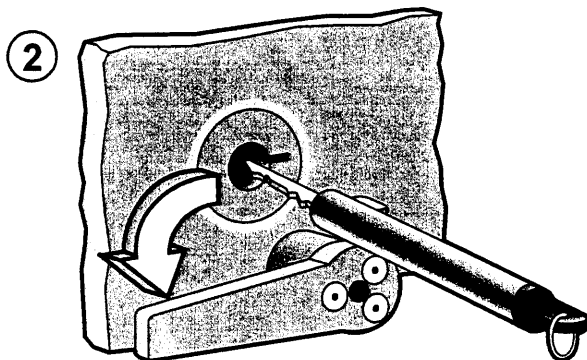

Rotate the operating handle 90° CCW to allow access to lock cylinder.

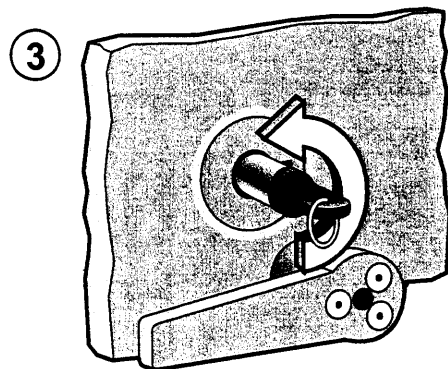


Insert key and rotate 180° CCW.

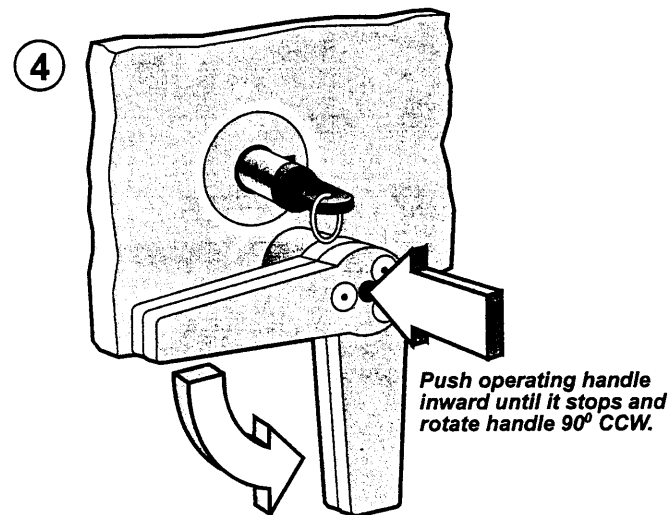


Push operating handle inward until it stops and rotate handle 90° CCW.

ILD Single Key Locking Procedure


Note: Handle and key rotate CW to lock

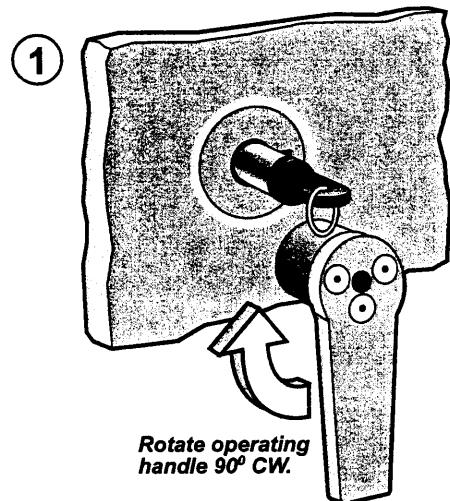

Rotate operating handle 90° CW.

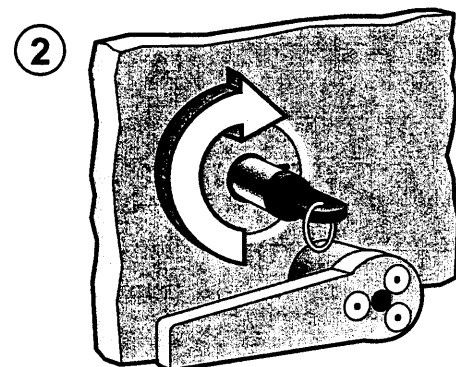

Rotate key 180° CW and remove.

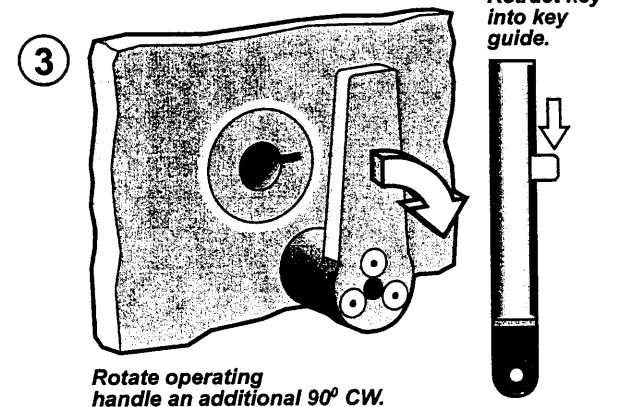


Retract key into key guide.

Rotate operating handle an additional 90° CW.


ILD Single Key Operating Procedure

ILD Dual Key Unlocking Procedure


Note: Handle and keys rotate CCW to unlock

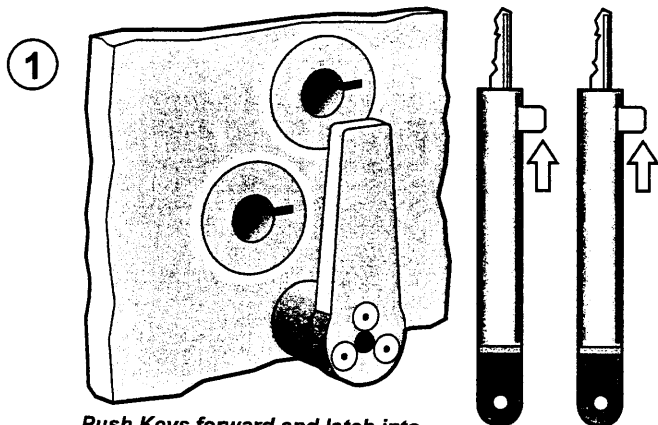


Push Keys forward and latch into extended position.

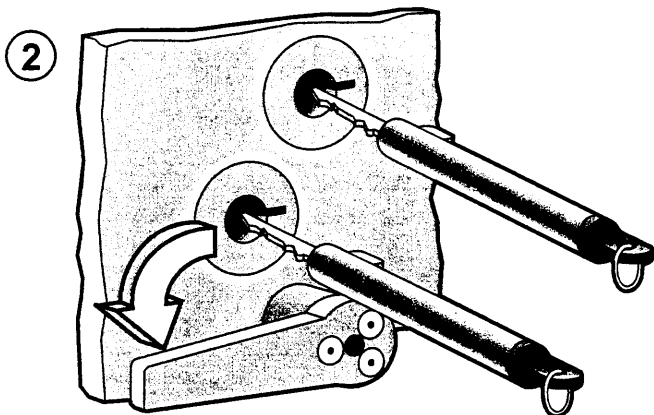

Rotate the operating handle 90° CCW to allow access to both lock cylinders.

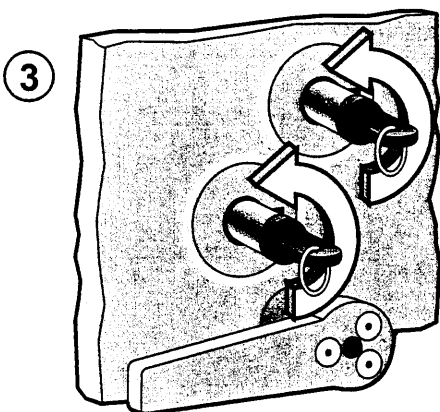


Insert keys and rotate 180° CCW.

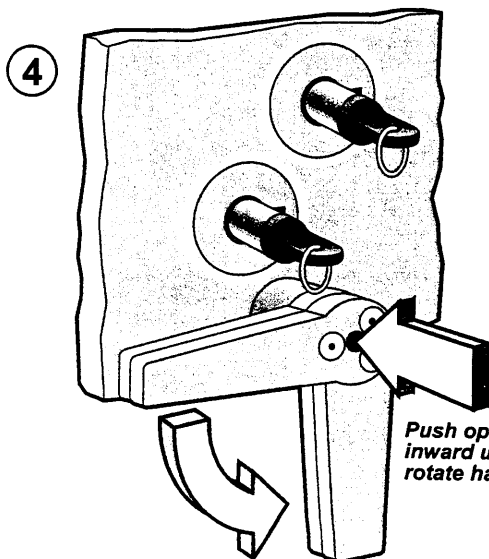


Push operating handle inward until it stops and rotate handle 90° CCW.

ILD Dual Key Locking Procedure


Note: Handle and keys rotate CW to lock

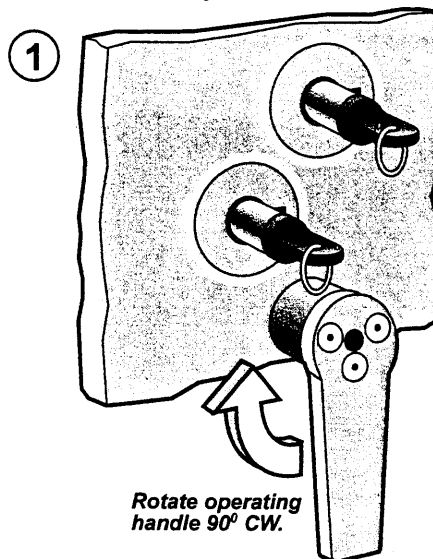

Rotate operating handle 90° CW.

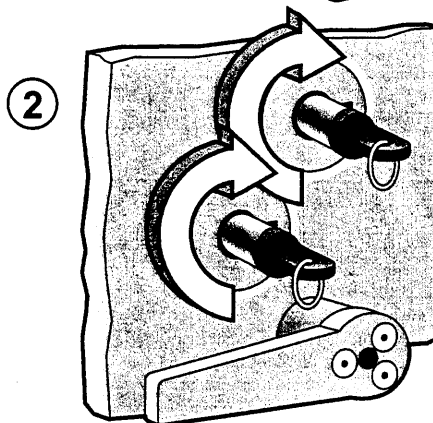

Rotate keys 180° CW and remove.

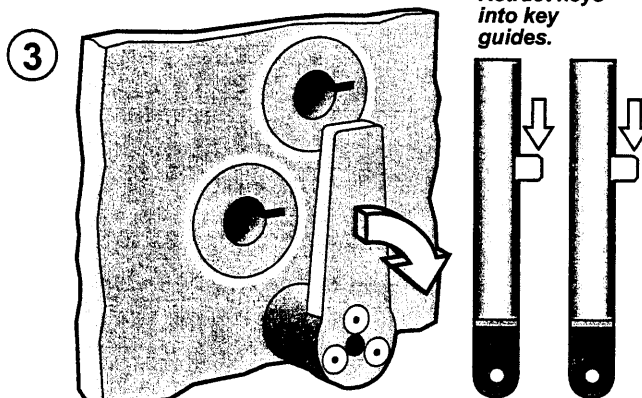

Retract keys into key guides.

Rotate operating handle an additional 90° CW.

ILD Dual Key Operating Procedure